

FIG. 1

2/5

40

USER ID	PERMITTED LOCATIONS
USER 1	LOC1, LOC3, LOC5 — LOC7
USER 2	LOC2, LOC9
USER 3	LOC1 — LOC9
⋮	
USER N	LOC7, LOC9

FIG. 2

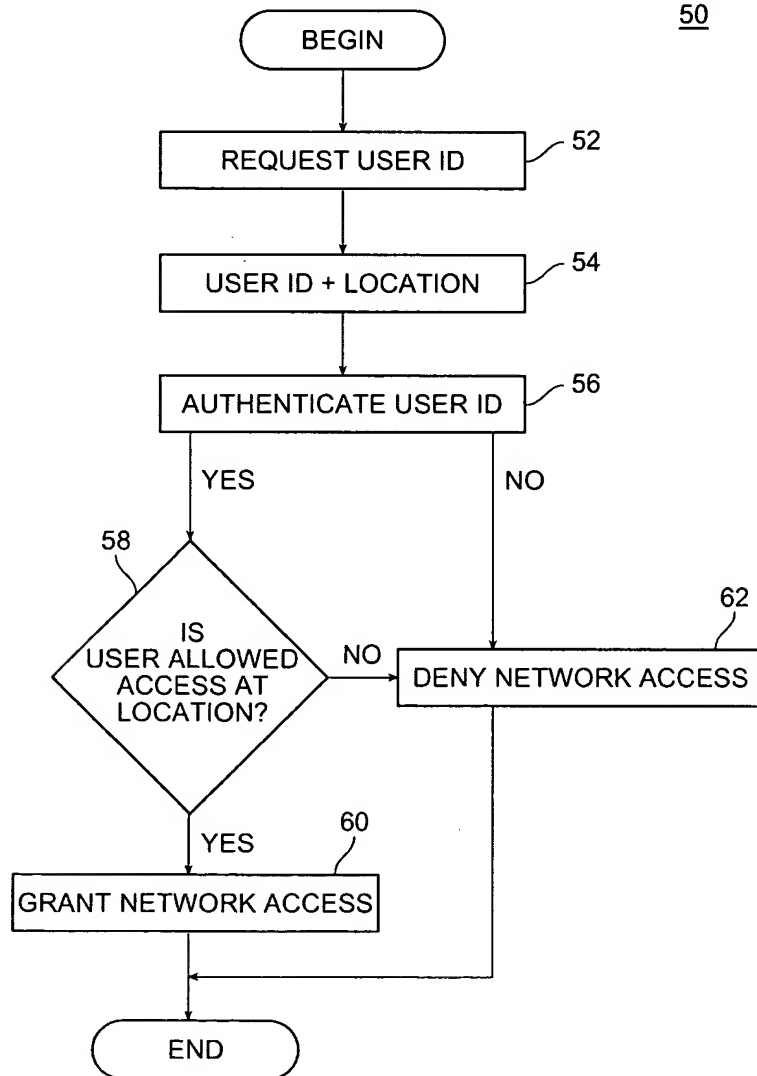


FIG. 3

3/5

```
#####  
# VSA Dictionary  
#####  
# Use the Radius specification attributes  
#  
@radius.dct  
  
#  
# Extreme Networks Vendor Specific Attributes below:  
#  
  
MACRO   Extreme-VSA(t,s)  26  [vid=1916 typel=%t% lenl=+2 data=%s%]  
  
ATTRIBUTE      Extreme-CLI-Authorization      Extreme-VSA(201, integer) Cr  
VALUE          Extreme-CLI-Authorization      Disable    0  
VALUE          Extreme-CLI-Authorization      Enable     1  
  
ATTRIBUTE      Extreme-Netlogin-Only          Extreme-VSA(206, integer) Cr  
VALUE          Extreme-Netlogin-Only          Disable    0  
VALUE          Extreme-Netlogin-Only          Enable     1  
  
ATTRIBUTE      Extreme-Shell-Command          Extreme-VSA(202, string) Cr  
  
ATTRIBUTE      Extreme-Netlogin-Vlan          Extreme-VSA(203, string) Cr  
  
ATTRIBUTE      Extreme-Netlogin-Url           Extreme-VSA(204, string) Cr  
  
ATTRIBUTE      Extreme-Netlogin-Url-Desc      Extreme-VSA(205, string) Cr  
  
ATTRIBUTE      Extreme-Netlogin-Only          Extreme-VSA(206, integer) Cr  
  
ATTRIBUTE      Extreme-Netlogin-Dot1P-Tag     Extreme-VSA(207, integer) Cr  
  
ATTRIBUTE      Extreme-User-Location          Extreme-VSA(208, string) Cr  
  
ATTRIBUTE      Extreme-Netlogin-VLAN-Tag      Extreme-VSA(209, integer) Cr  
  
#####  
# VSA Dictionary  
#####
```

FIG. 4

4/5

The screenshot shows a software window with a menu bar (File, Help) and a list of radio buttons on the left: Servers, RAS Clients, Users (selected), Profiles, Proxy, Tunnels, IP Pools, IPX Pools, Access, Configuration, and Statistics. The main area is divided into sections for user configuration and attribute management. The 'User Name' field contains '\\JAREDNMS\IEAP-TTLS USERS' with 'Add' and 'Remove' buttons. The 'User Type' is set to 'NT Domain Group' with a 'Set password' button. Below this is a 'Check list attributes' section with a 'Return list attributes' button and a list box containing 'Extreme-Use-Location' and 'jared-ap1'. To the right is an 'Add New Attribute' dialog box. This dialog has a list of 'Available attributes' including 'Extreme-Netlogin-Uri', 'Extreme-Netlogin-Uri-Desc', 'Extreme-Netlogin-Vlan', 'Extreme-Netlogin-VLAN-Tag', 'Extreme-Shell-Command', 'Extreme-User-Location', and 'Framed-Compression'. It includes an 'Enter a string:' field with the text 'your\_ap\_location\_here' and 'Add'/'Close' buttons. At the bottom of the main window are checkboxes for 'Maximum concurrent connection' and 'Profile name: <no profile>' with 'Save' and 'Reset' buttons.

File Help

☐ Servers  
☐ RAS Clients  
☒ Users  
☐ Profiles  
☐ Proxy  
☐ Tunnels  
☐ IP Pools  
☐ IPX Pools  
☐ Access  
☐ Configuration  
☐ Statistics

User Name: \\JAREDNMS\IEAP-TTLS USERS [Add] [Remove]  
User Type: NT Domain Group [Set password]  
Check list attributes [Return list attributes]  
Extreme-Use-Location jared-ap1  
Add New Attribute  
Available attributes:  
Extreme-Netlogin-Uri  
Extreme-Netlogin-Uri-Desc  
Extreme-Netlogin-Vlan  
Extreme-Netlogin-VLAN-Tag  
Extreme-Shell-Command  
Extreme-User-Location  
Framed-Compression  
Enter a string: your\_ap\_location\_here [Add] [Close]  
Multi-Valued Orderable [ ] Default  
[ ] Maximum concurrent connection  
Profile name: <no profile> [Save] [Reset]

FIG. 5

5/5

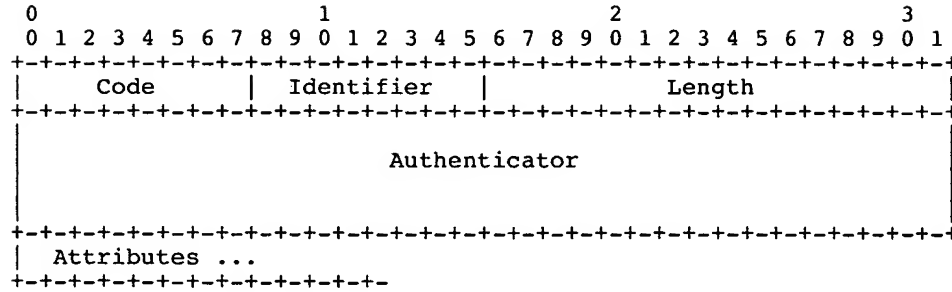


FIG. 6A

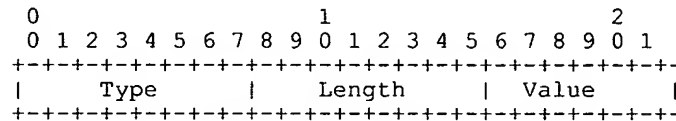


FIG. 6B

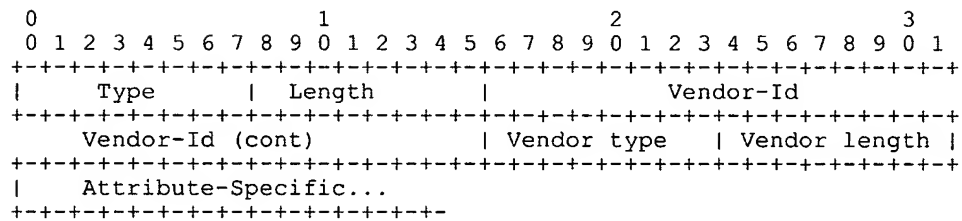


FIG. 6C